

PROTSURV DuoCON


Digital Control System

Compression Testing Setup - Operation Manual

INDEX

| | |
|--|-------------------|
| 1. OPERATION OF CUBE TESTING | page 3-5 |
| 2. OPERATION FOR ACV TESTING | page 5-7 |
| 3. OPERATION FOR 10% FACT TESTING | page 8-10 |
| 4. DOWNLOADING LOG FILES TO PC | page 10-12 |
| 5. NOTES | page 13 |

1. Operation for Cube Testing

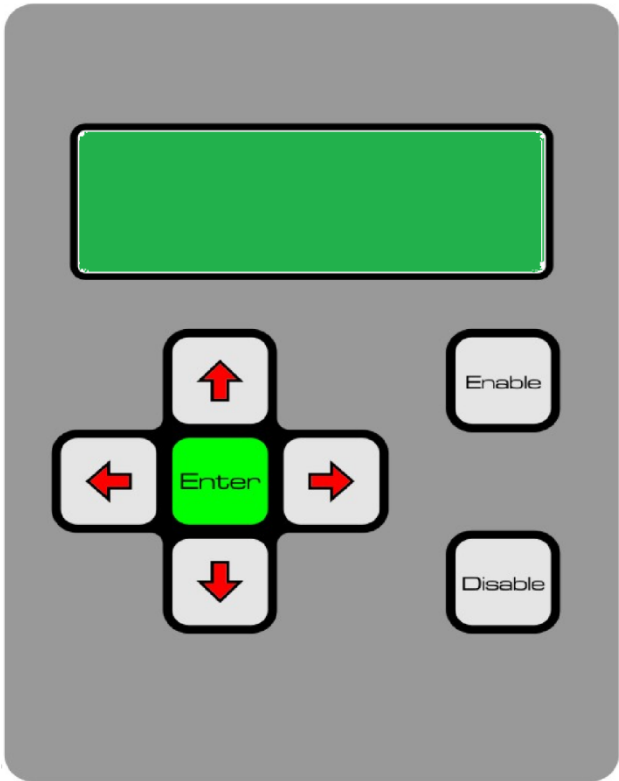

Switch On DuoCon Control Unit
On Back Side Of This Unit



Protsurv Geo Centre
+2711 976 2070
Protsurv V2.00
CUBE Press x.xx



Protsurv Geo Centre
CUBE PRESS
2014/01/13 07:39
Press Enter

PRESS ENTER To Go To Main Menu



Load 0.1 kN
*Run Test
*Setup

To Select Test, Scroll down
To Run Test And Press Enter
MAKE SURE THE SWITCH ON
FRONTPANEL ARE ON THE AUTO
POSITION!!!



*CUBE Testing
*ACV
*10% FACT
*Return

Scroll to CUBE Testing And Press
Enter



*Load Rate 337 kN/min
*Test Setup
*Run Test
*View Last Test

To Setup Test Scroll
Down to Test Setup And
Press Enter



*Batch No aaa-000

To RUN Test Scroll Down To
RUN Test And Press Enable



Approaching Sample
Load 0.1 kN
Time 00:01

Approaching Will Begin And
Run Until Sample has been
Touched And will Start
Running The Test



Running Test
Load 0.5 kN
Time 00:00

Version 1


Test will Run Until The Sample
Reaches Peak Load



| | |
|---------|----------|
| Failure | |
| Load | 600.0 kN |
| Time | 02:00 |

When Failure Are
Complete The Results Are
Displayed Until Enable Are Pressed

2. Operation for ACV Testing

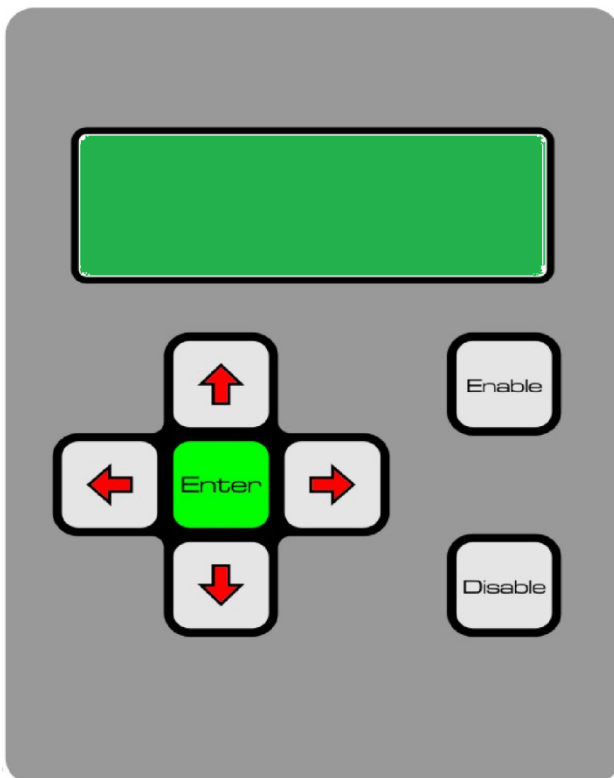

Switch On DuoCon Control Unit
On Back Side Of This Unit



Protsurv Geo Centre
+2711 976 2070
Protsurv V2.00
Cube Press x.xx



Protsurv Geo Centre
Cube Press
2014/01/13 07:39
Press Enter

PRESS ENTER To Go To Main Menu



Load 0.1 kN


*Run Test
*Setup

**To Select Test, Scroll down
To Run Test And Press Enter
MAKE SURE THE SWITCH ON
FRONTPANEL ARE ON THE AUTO
POSITION!!!**




*CUBE Testing
*ACV
*10 % FACT
*Return

**Scroll To ACV And
Press Enter**




| | |
|-----------------|-----------|
| *Load Rate | 40 kN/min |
| *Test Setup | |
| *Run Test | |
| *View Last Test | |

To Setup Test Scroll Down to Test Setup And Press Enter




| | |
|-----------|---------|
| *Batch No | aaa-000 |
|-----------|---------|

To RUN Test Scroll Down To RUN Test And Press Enable




| | |
|--------------------|--------|
| Approaching Sample | |
| Load | 0.1 kN |
| Time | 00:01 |

Approaching Will Begin And Run Until Sample has been Touched And will Start Running The Test



| | |
|--------------|--------|
| Running Test | |
| Load | 0.5 kN |
| Time | 00:00 |


Test will Run Until The Sample Reaches 400 kN in 10 min



| | |
|---------------|----------|
| Test complete | |
| Load | 400.0 kN |
| Time | 10:00 |

When testing Are Complete The Results Are Displayed Until Disable Are Pressed

3. Operation for 10 % FACT Testing

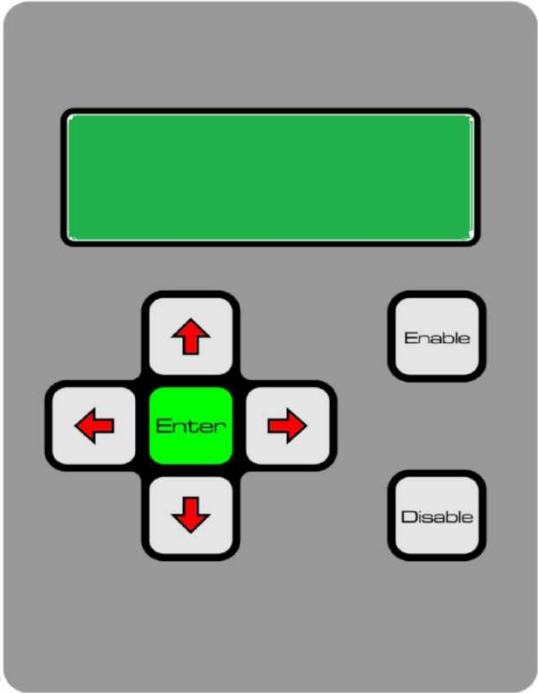

Switch On DuoCon Control Unit
On Back Side Of This Unit



Protsurv Geo Centre
+2711 976 2070
Protsurv V2.00
Cube Press x.xx



Protsurv Geo Centre
Cube Press
2014/01/13 07:39
Press Enter

PRESS ENTER To Go To Main Menu



| | |
|-----------|--------|
| Load | 0.1 kN |
| *Run Test | |
| *Setup | |

To Select Test, Scroll down
 To Run Test And Press Enter
**MAKE SURE THE SWITCH ON
 FRONT PANEL ARE ON THE AUTO
 POSITION!!!**



| | |
|---------------|--|
| *Cube Testing | |
| *ACV | |
| *10% FACT | |
| *Return | |

Scroll to 10% FACT And Press Enter



| | |
|-----------------|-----------|
| *Load Rate | 60 kN/min |
| *Test Setup | |
| *Run Test | |
| *View Last Test | |

To Setup Test Scroll
 Down to Test Setup And
 Press Enter



| | |
|-----------|---------|
| *Batch No | aaa-000 |
|-----------|---------|

To RUN Test Scroll Down To
 RUN Test And Press Enable



| | |
|--------------------|--------|
| Approaching Sample | |
| Load | 0.1 kN |
| Time | 00:01 |

Approaching Will Begin And
 Run Until Sample has been
 Touched And will Start
 Running The Test



| | |
|--------------|--------|
| Running Test | |
| Load | 0.5 kN |
| Time | 00:00 |


Test will Run Until The Sample Reaches Desired Load In 10 min



| | |
|---------------|----------|
| Test complete | |
| Stability | 15.05 kN |
| Flow | 5.05 mm |
| Time | 00:32 |

When Testing Are Complete The Results Are Displayed Until Disable Are Pressed

4. Downloading Log Files to PC

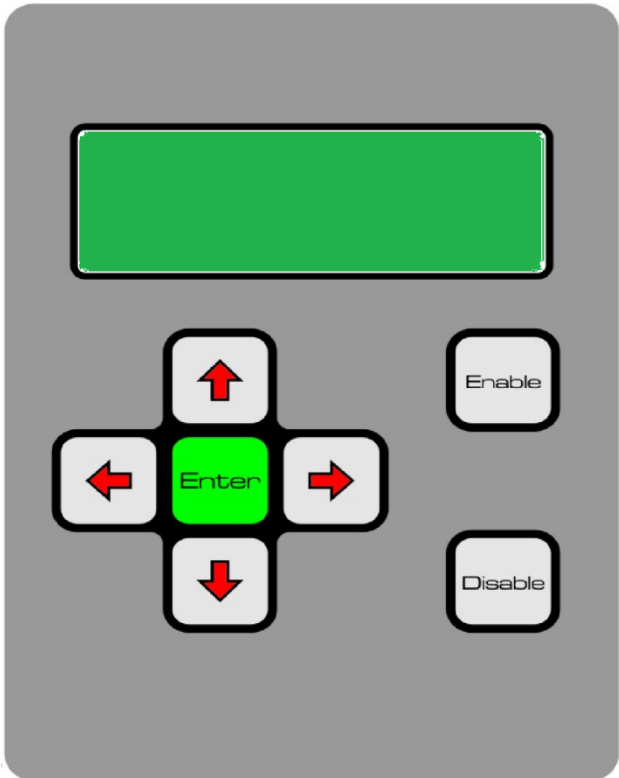

Switch On DuoCon Control Unit On Back Side Of This Unit



Protsurv Geo Centre
+2711 976 2070
Protsurv V2.00
Cube Press Press x.xx



Protsurv Geo Centre
Cube Press
2014/01/13 07:39
Press Enter

PRESS ENTER To Go To Main Menu



Load 0.01 kN
Displace 0.01 mm
*Run Test
*Setup


Scroll Down To Next Page



*Set Speed
*Mass Storage Device
__Not Connected__
*Set Date & Time

**Scroll Down To Mass Storage
Device And Plug USB Cable to
Control Unit At Backside Of
Control Unit And Then To PC
THEN PRESS ENTER TO CONNECT
TO PC**



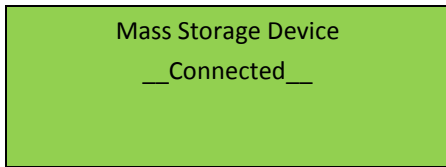

**When Connected Are Displayed
The Mass Storage Device Will
Automatically Open On PC
All Logging Data can Be Copied From
LOG Folder To PC In TXT Format**

NOTES
